EN

MacroKey Manager Manual

Introduction

MacroKey Manager is an application designed for selected Graphic Tablets with MacroKey features. It enhances user experiences while using Graphic Tablet by providing easy access to the most frequently used “Programs” and/or “KeyStrokes”.

Before using MacroKey Manager, please ensure Driver is installed and Tablet is connected to your PC/NB.

Installation

MacroKey Manager is installed along with Tablet Driver. Please refer to User Manual for details on driver installation procedures.
Note: MacroKey Manager will not launch without Graphic Tablet detected on PC/NB, or Graphic Tablet without MacroKey features. Please check with your vendor/distributor for product details.

Launch MacroKey Manager

After Driver is installed successfully, you can find the icon located in System Tray, click on icon to launch Driver Interface.

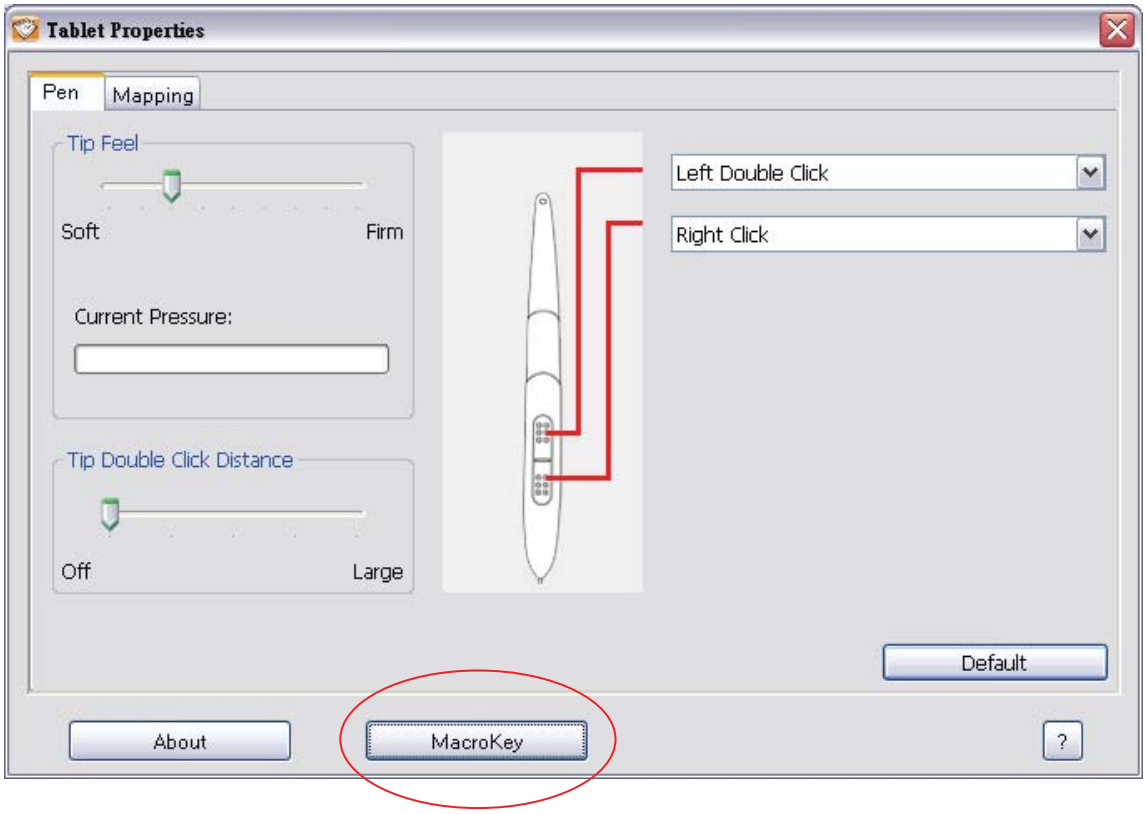

Click on “ MacroKey ” to start setting MacroKey Manager.

MacroKey Manager Profile Settings

MacroKey Manager includes a Default Profile, which has pre-assigned command on each MacroKey.

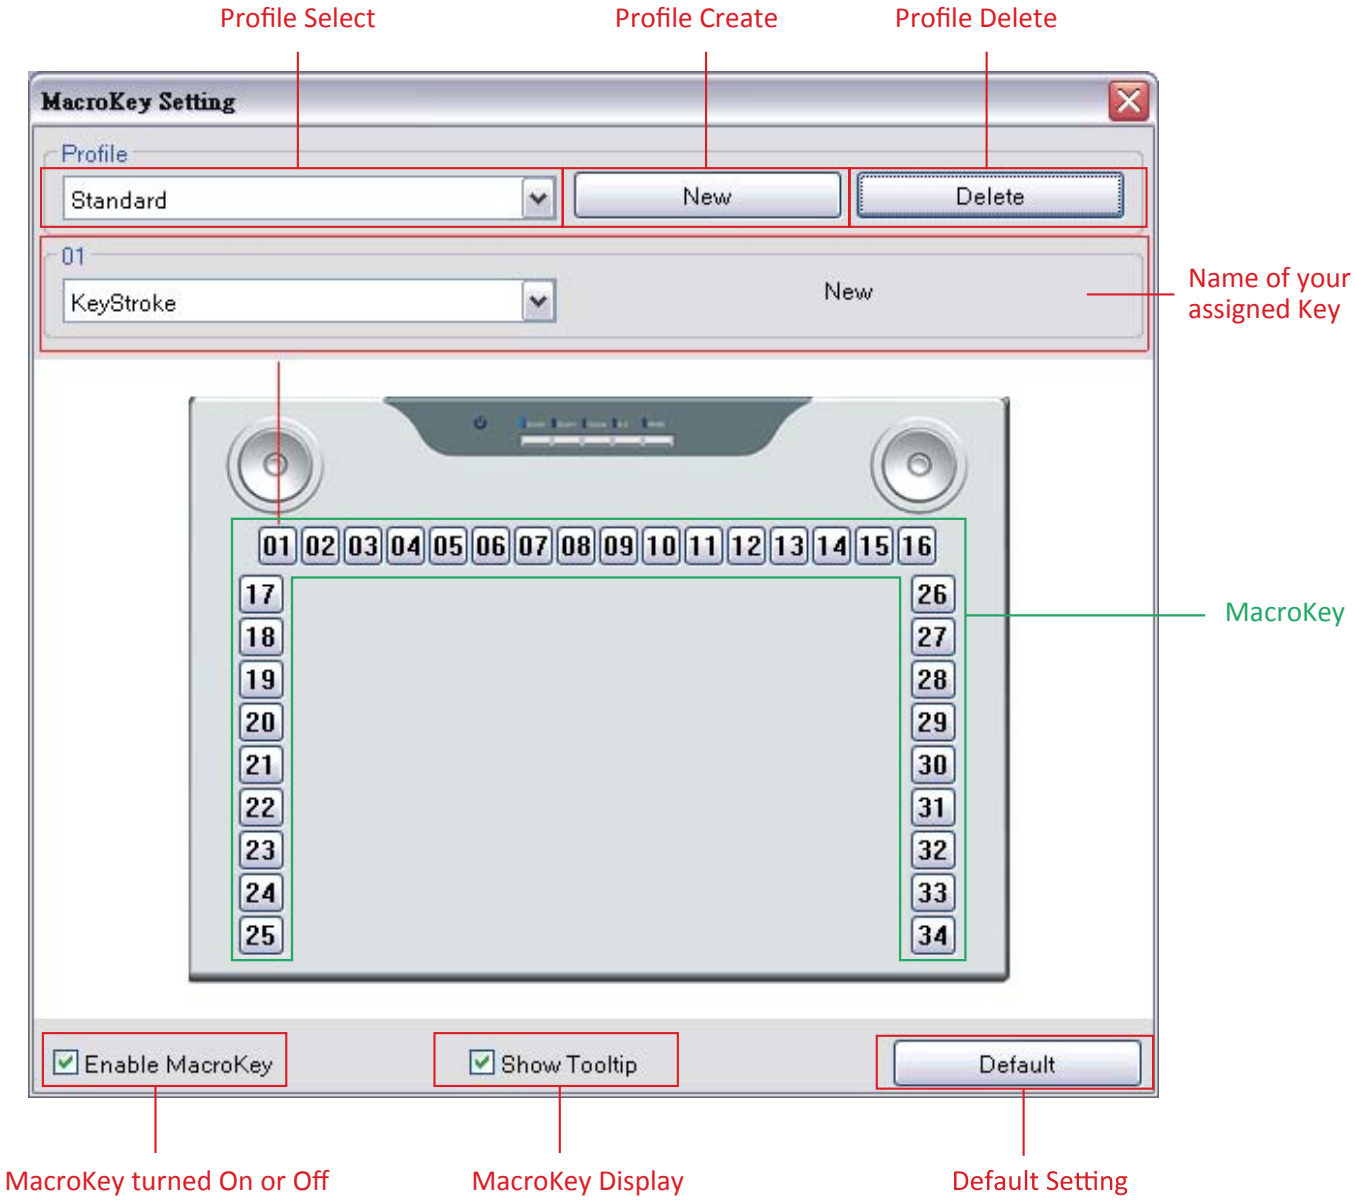

MacroKey function can always be turned **On** or **Off** by selecting “Enable MacroKey”
Tooltip of each MacroKey can also be displayed on screen. This display can be toggled On or Off by selecting “MacroKey Display”

Profile Management

New Profiles can be created and deleted accordingly.

Create New Profile

To set:

Click on "New" → Input Name(e.g. file 1)→ press "OK" to finish.

Delete created Profile

To set:

Select a Profile → click on "Delete" to delete.

MacroKeys Assignment

Once a Profile is created, you may now assign commands to each of the MacroKeys.

There are 6 main Settings when assigning commands

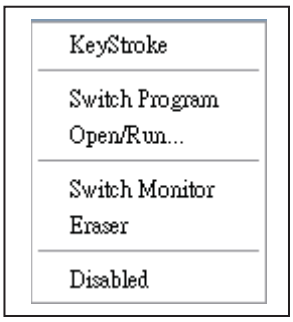

1. KeyStroke

Define your own KeyStroke (keyboard combinations) to assist work efficiency.

To set:

Select a MacroKey " 01 ~ 34 " → KeyStroke →

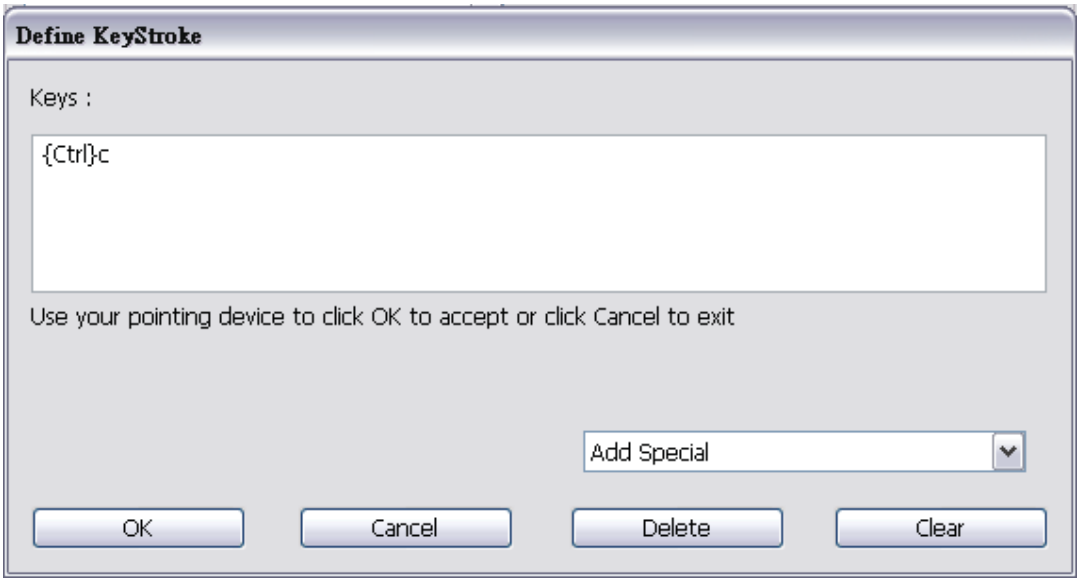

define your own combination (e.g. Ctrl + C) → OK →

Input Name →

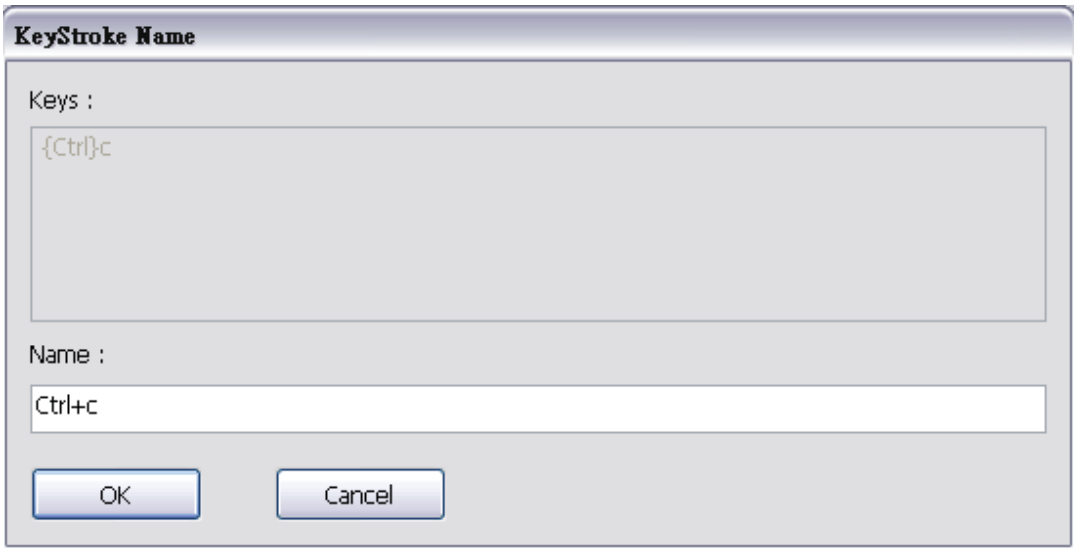

→ OK to complete

Note: While you are defining your own combination, you will need to use the

“ Delete ” or “ Clear ” buttons to reset combination.

There are 4 Additional Keyboard Commands which can be assigned to your MacroKey:

I. Print Screen
II. Alt + Print Screen
III. Show Desktop
IV. My Computer

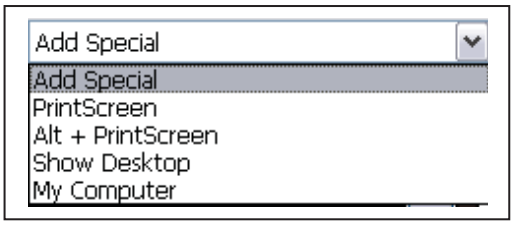

2. Switch Program

Switch to different program windows that are currently running.

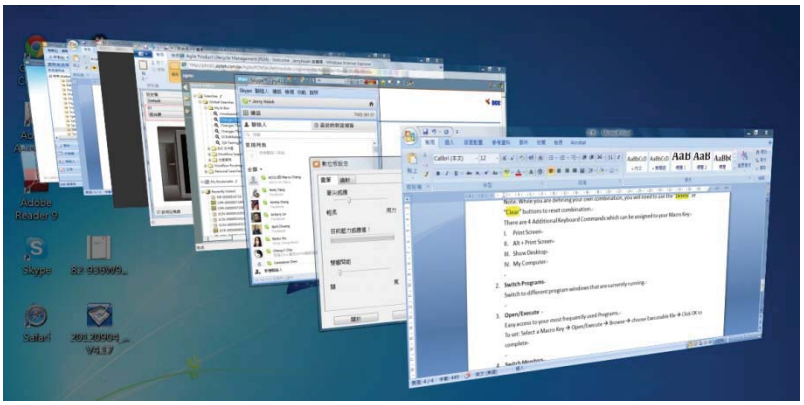

3. Open/Run

Easy access to your most frequently used Programs.

To set:

Select a MacroKey → Open/Run → Browse → choose Executable file → Click OK to complete

4. Switch Monitor

Set your Graphic Tablet to work from monitor to monitor.

When there are two displays setup on your PC/NB, your Graphic Tablet can work on both Monitors or either one of them.

Default setting: Working Area is divided by 2 Displays

After Switching: Working Area is now for only Display 1 or Display 2.

5. Eraser

Activate Eraser Function.

Note: Only works on Software that supports Eraser Function on Graphic Tablets.

Please check with your software vendor for more details.

6. Disabled

MacroKey disabled.

To **modify** a MacroKey

To set:

Select a Profile → choose MacroKey (01 ~ 34) → repeat above relative Steps 1 ~ 6.